



OPTIONS
OMIT PARTS IF OPTION NOT USED

* PULL UP RESISTORS FOR
USE WITH MANUAL SWITCHES
INSTEAD OF MINITIOWNER CONTROL
Rx1, Rx2, Rx3, Rx4, Rx5
OMIT Rx6 TO PULL TONE LOW
WHEN NOT USED

** FAULT LED
Dx6, Rx7, Rx8, Qx1
J2 IS USED IF LEDS ARE
MOUNTED OFF THE BOARD

THE PAD ON THE BOTTOM OF THE RT5047
MUST BE SOLDERED TO THE GROUND PLANE

RT5047		
LNB Power		
J0	Rev 2.1	Page 1 of 1
	06/JUL/2019	