



OPTIONS
OMIT PARTS IF OPTION NOT USED

* PULL UP RESISTORS FOR
USE WITH MANUAL SWITCHES
INSTEAD OF MINITIOUNER CONTROL

Rx1, Rx2, Rx3, Rx4, Rx5
OMIT Rx6 TO PULL TONE LOW
WHEN NOT USED

** FAULT LED

Dx6, Rx7, Rx8, Qx1
J2 IS USED IF LEDES ARE
MOUNTED OFF THE BOARD

THE PAD ON THE BOTTOM OF THE RT5047
MUST BE SOLDERED TO THE GROUND PLANE

RT5047	
LNB Power	
JO	Rev 2.1 06/JUL/2019
Page 1 of 1	